


HP868 Logic PCB Sheet (4) 00086-60052


ROM




N/F

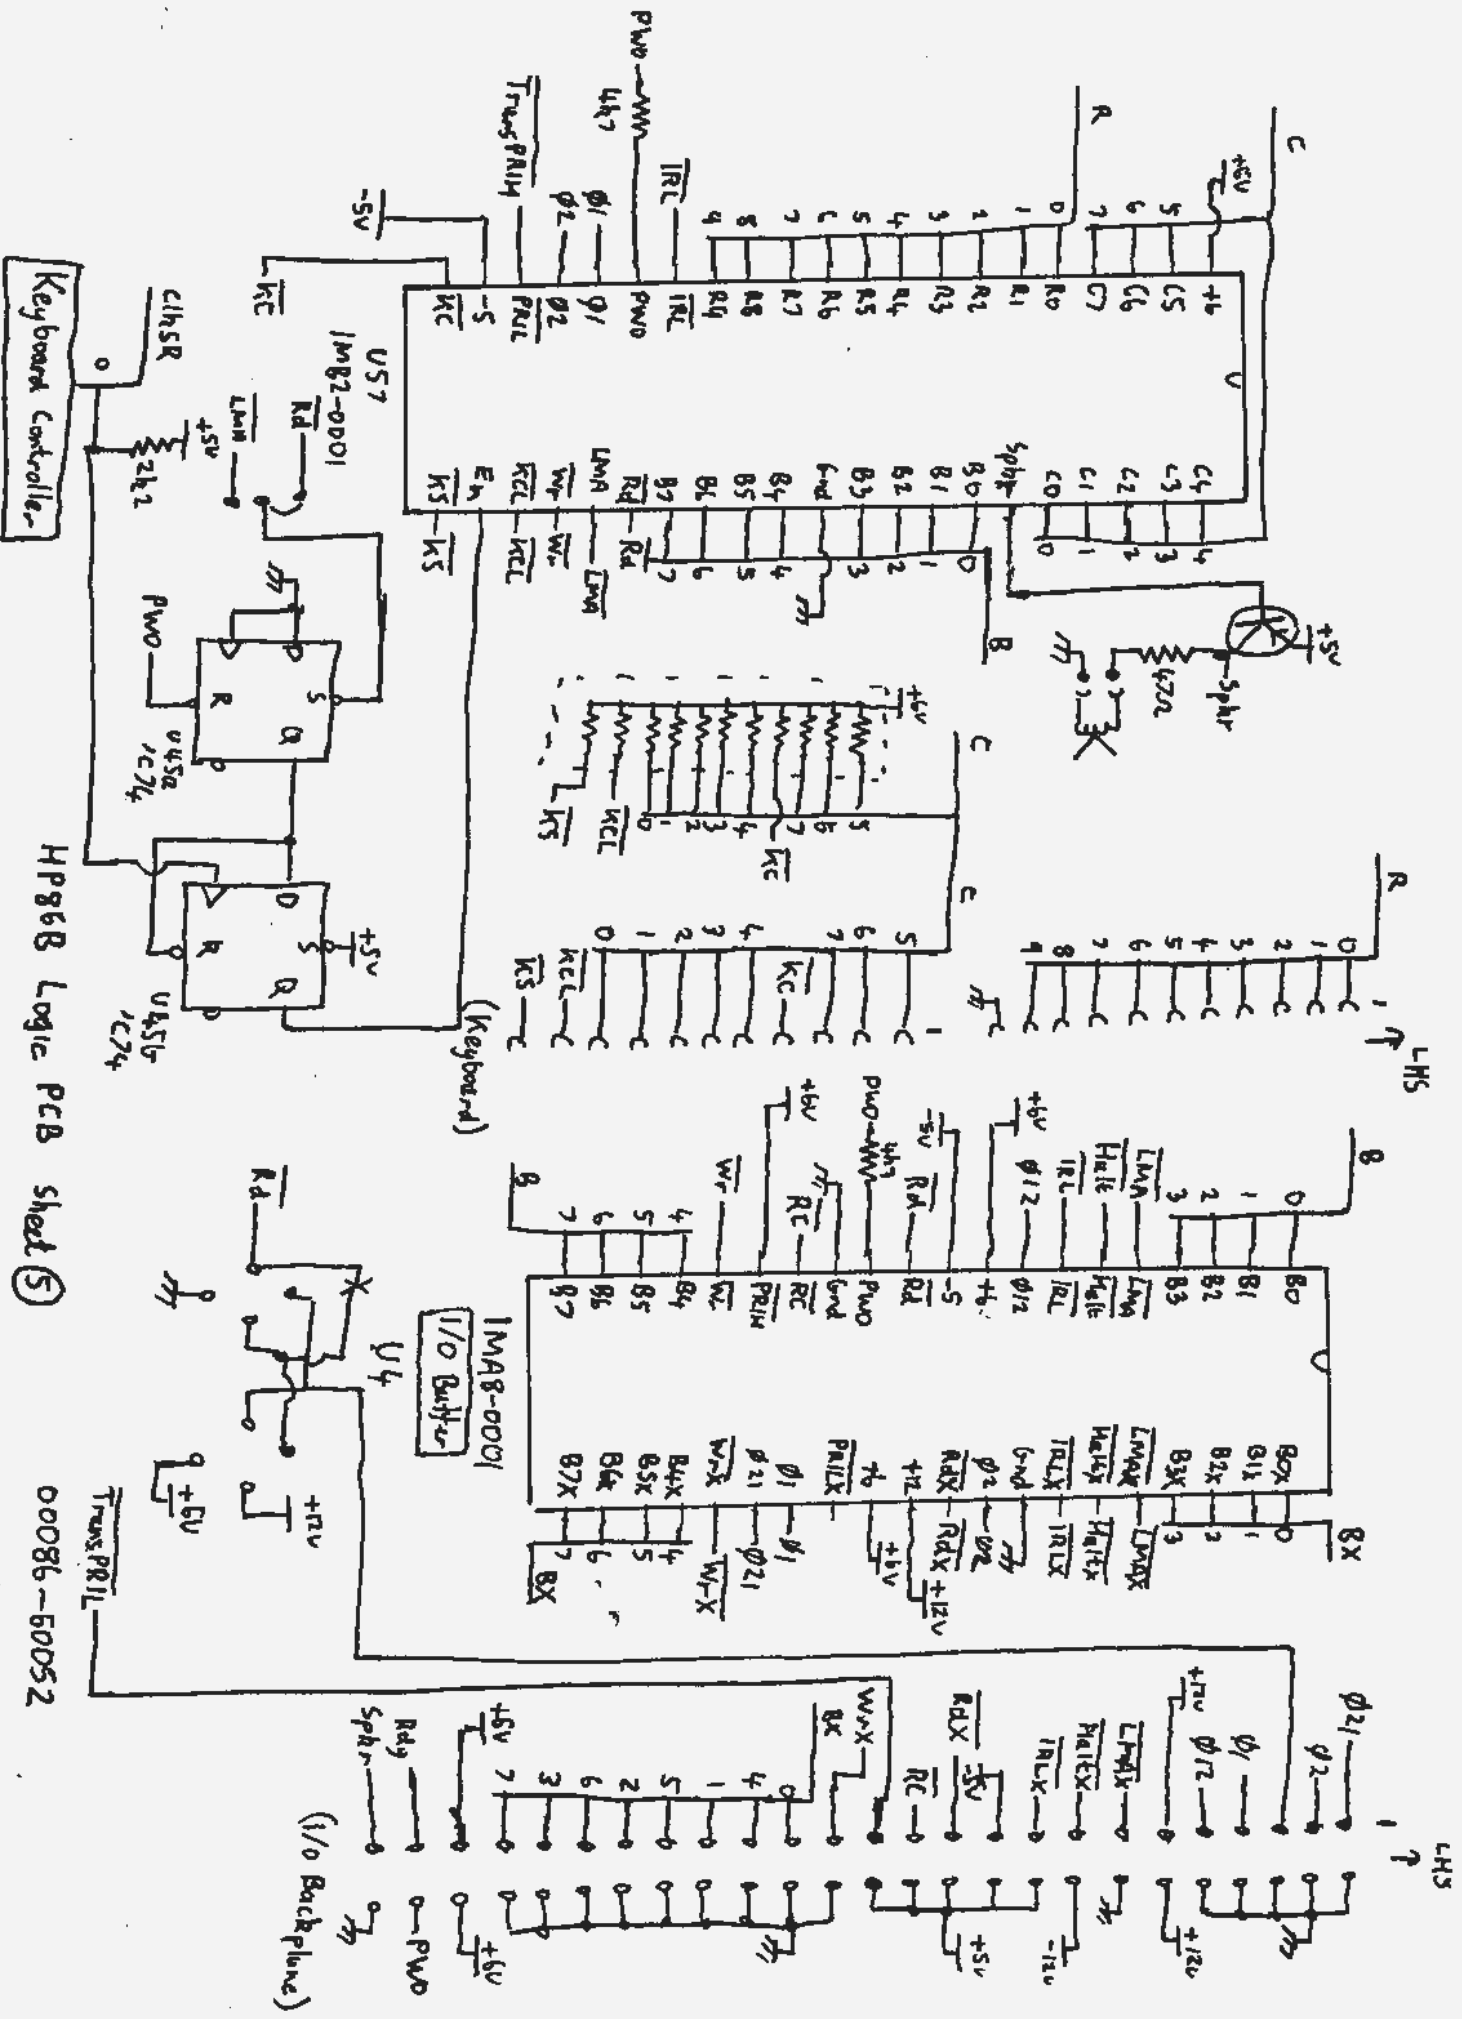


HP86B Logic PCB sheet 5




00086-50052

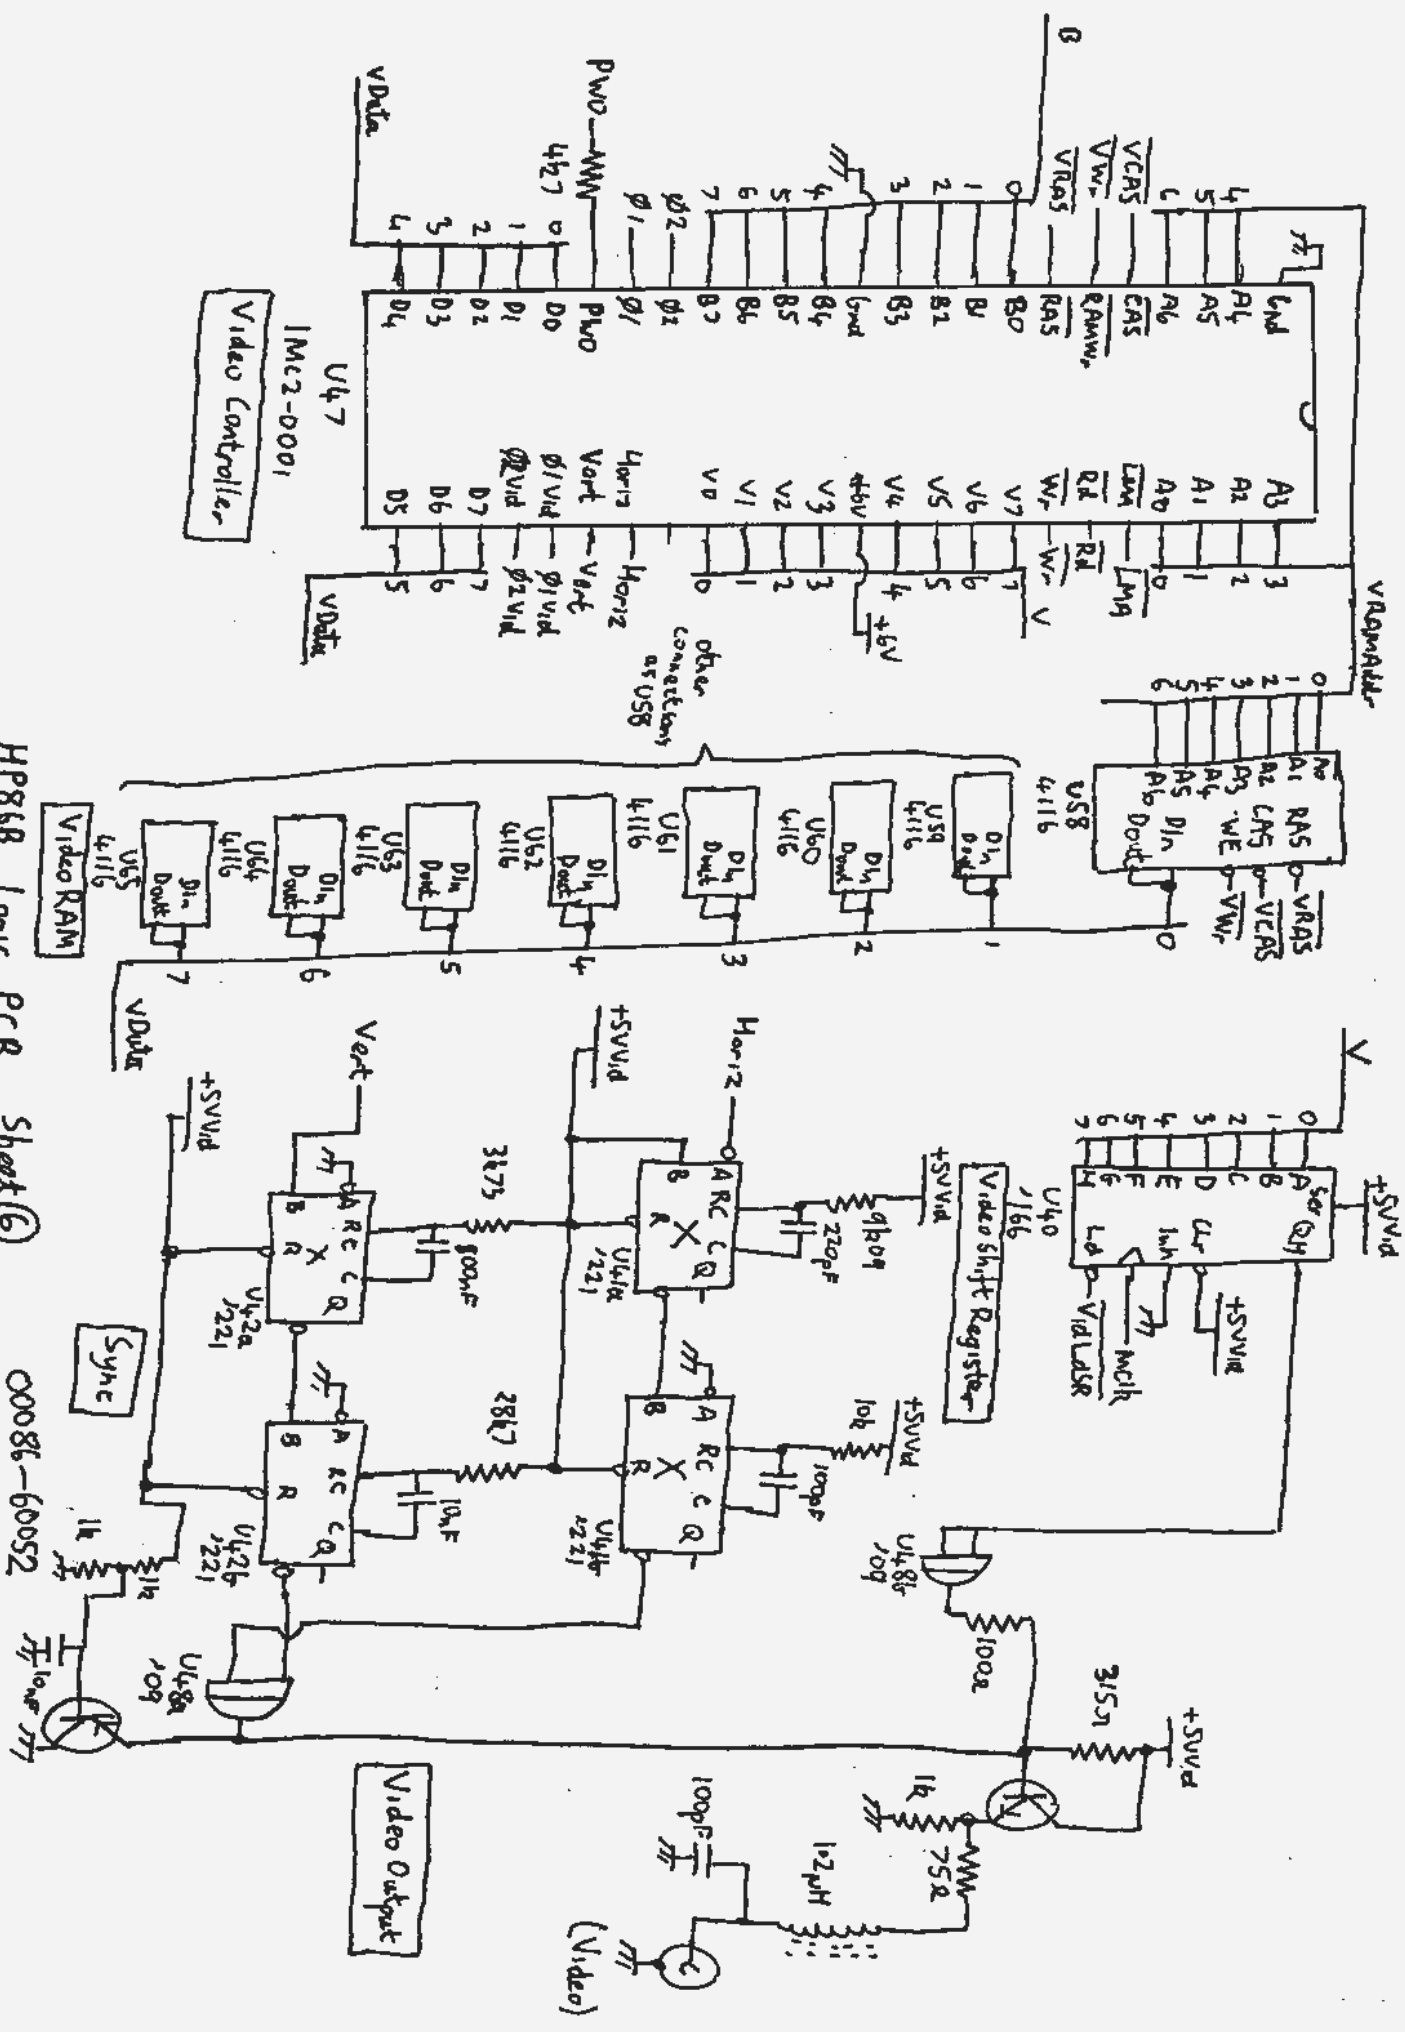

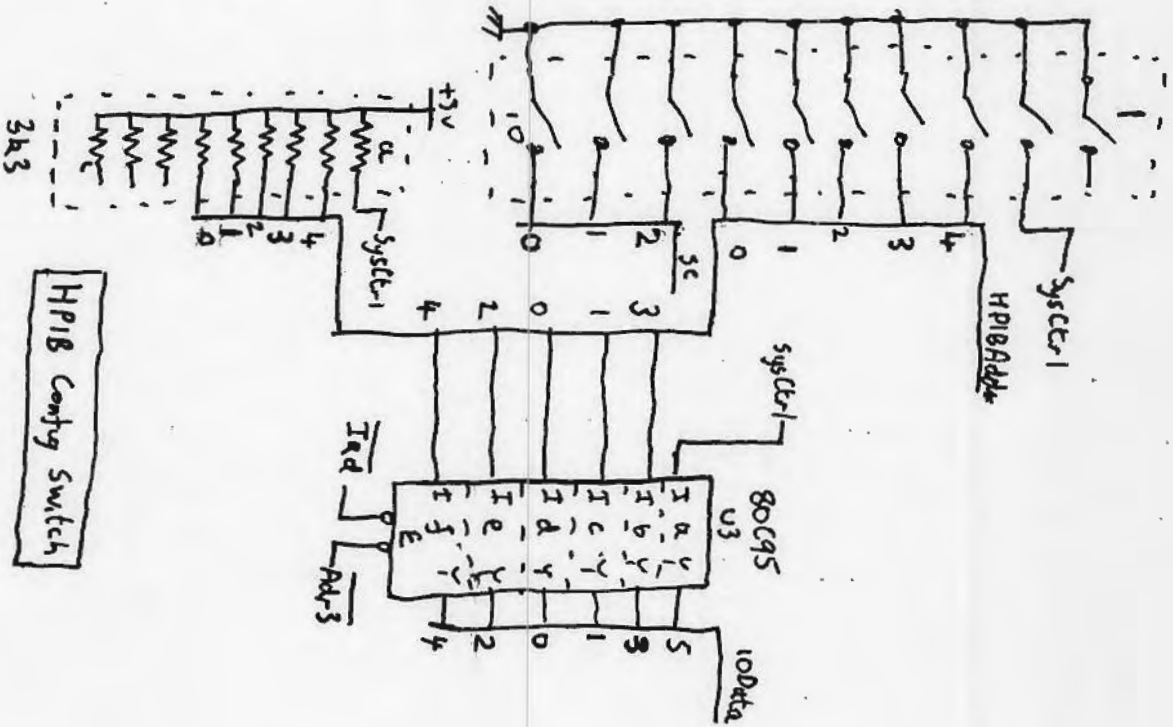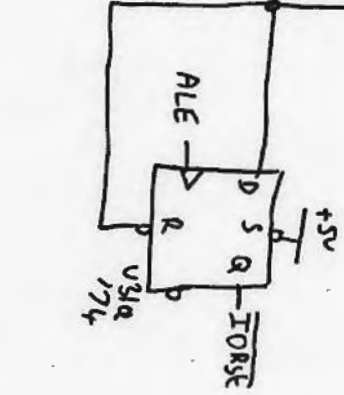
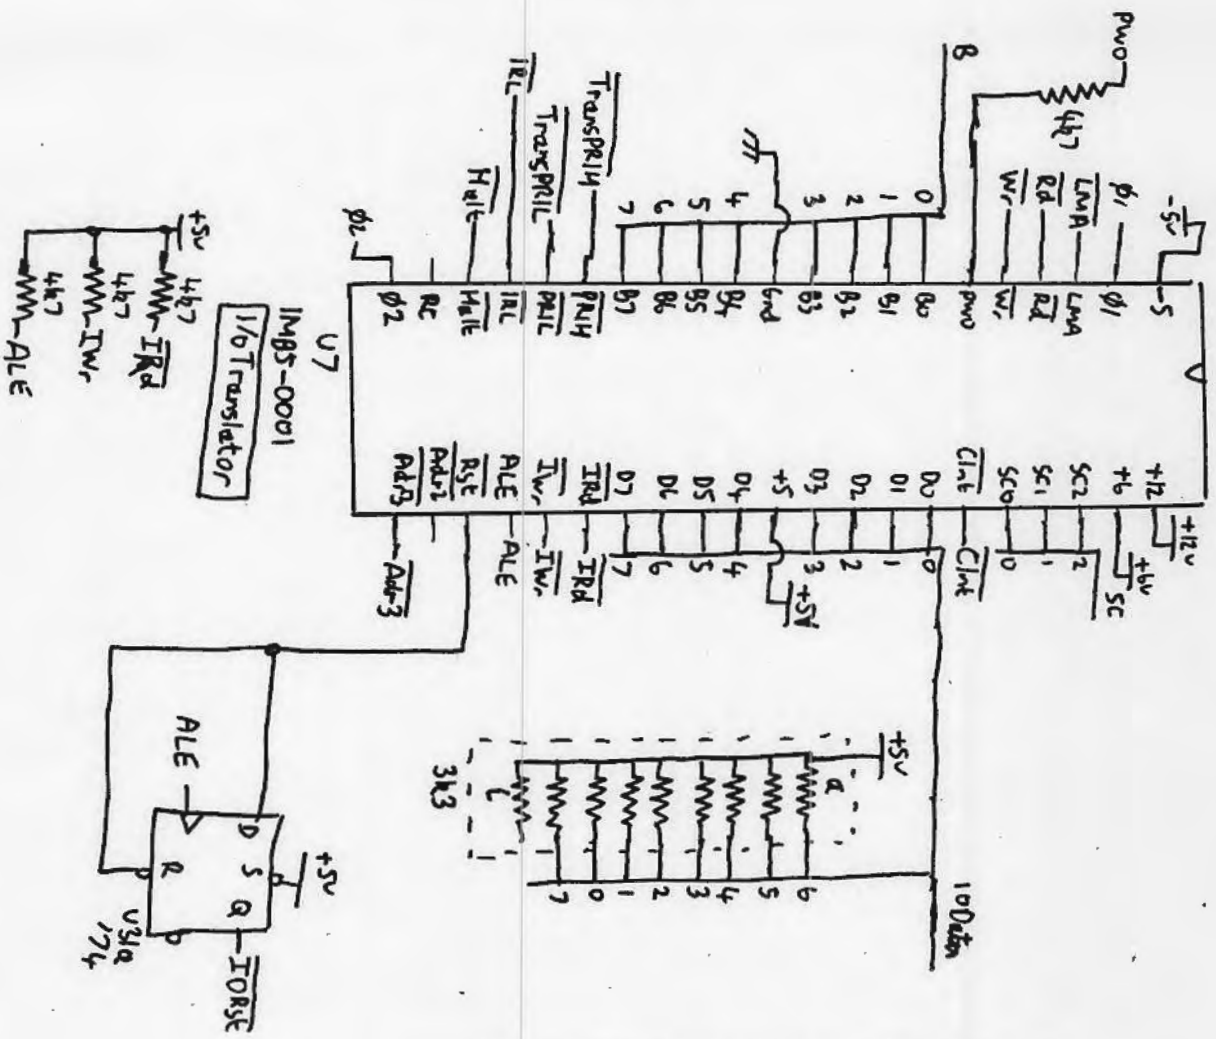


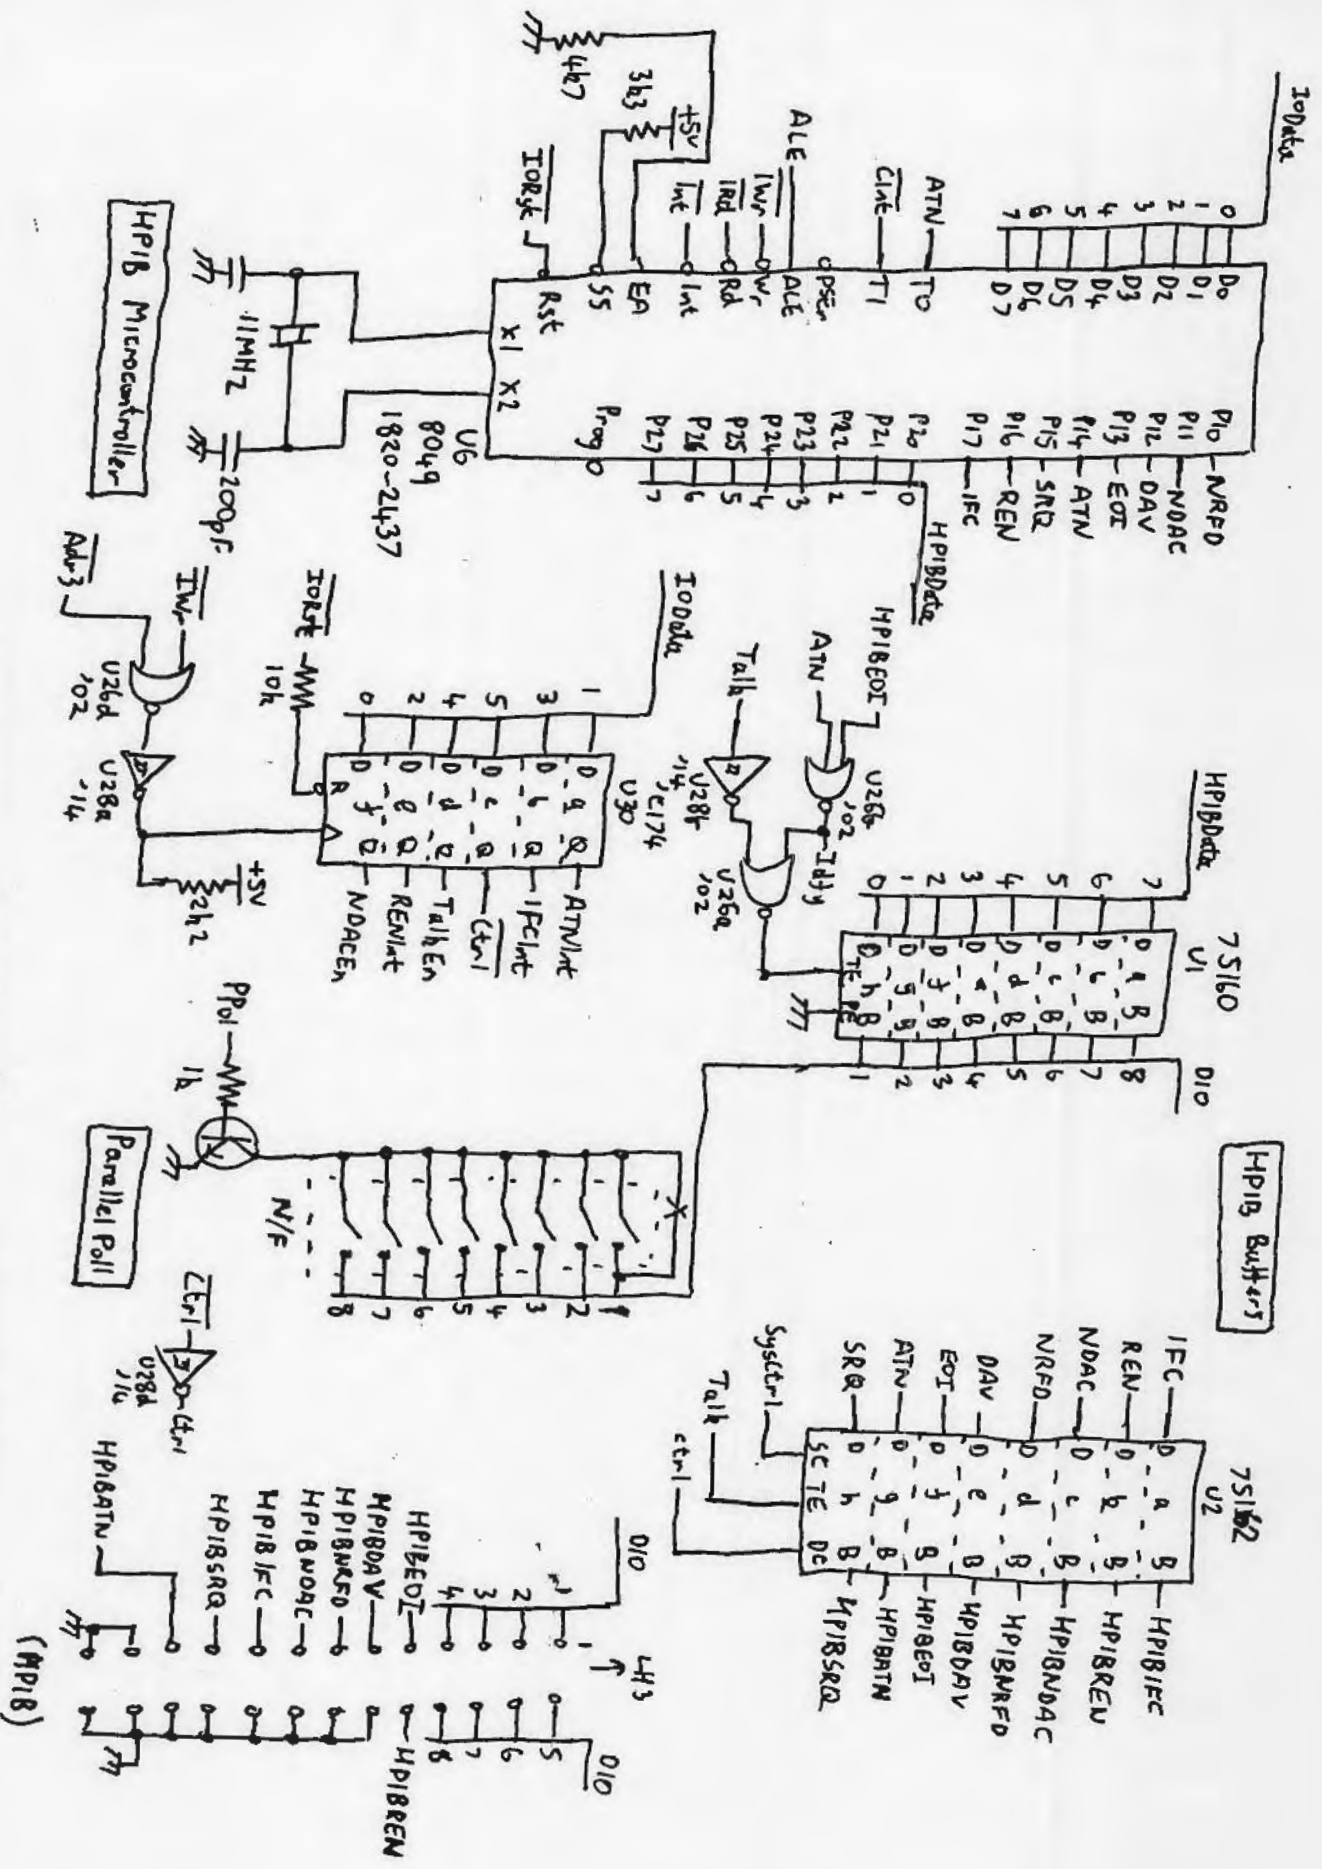



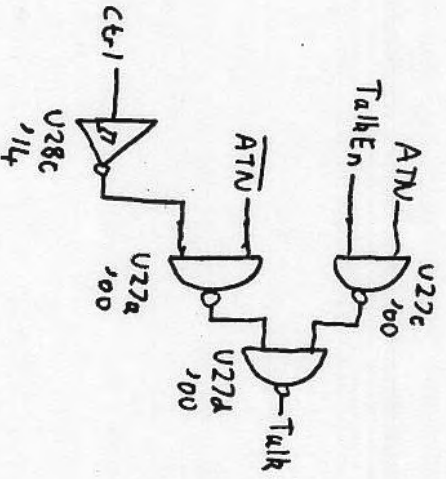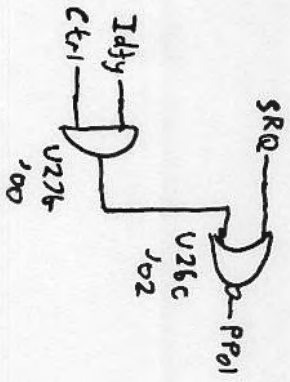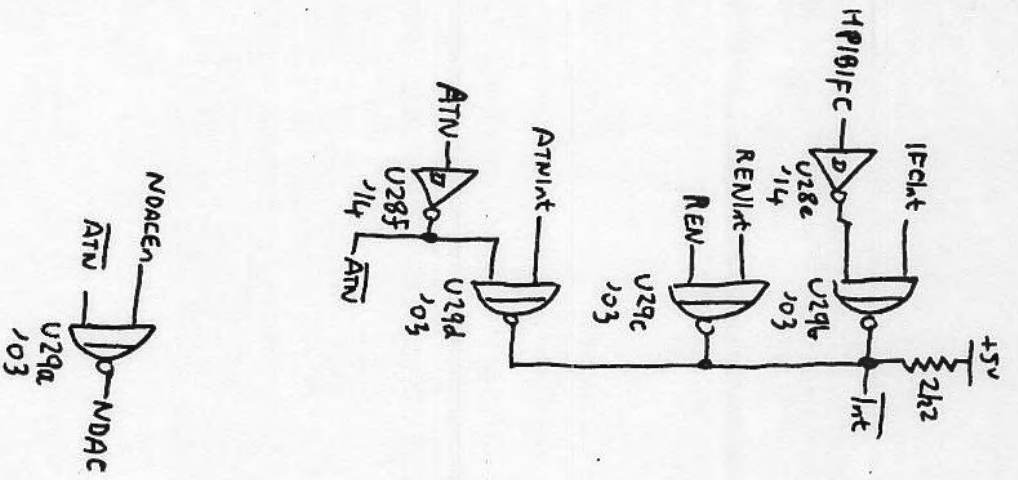

HP1B Logic

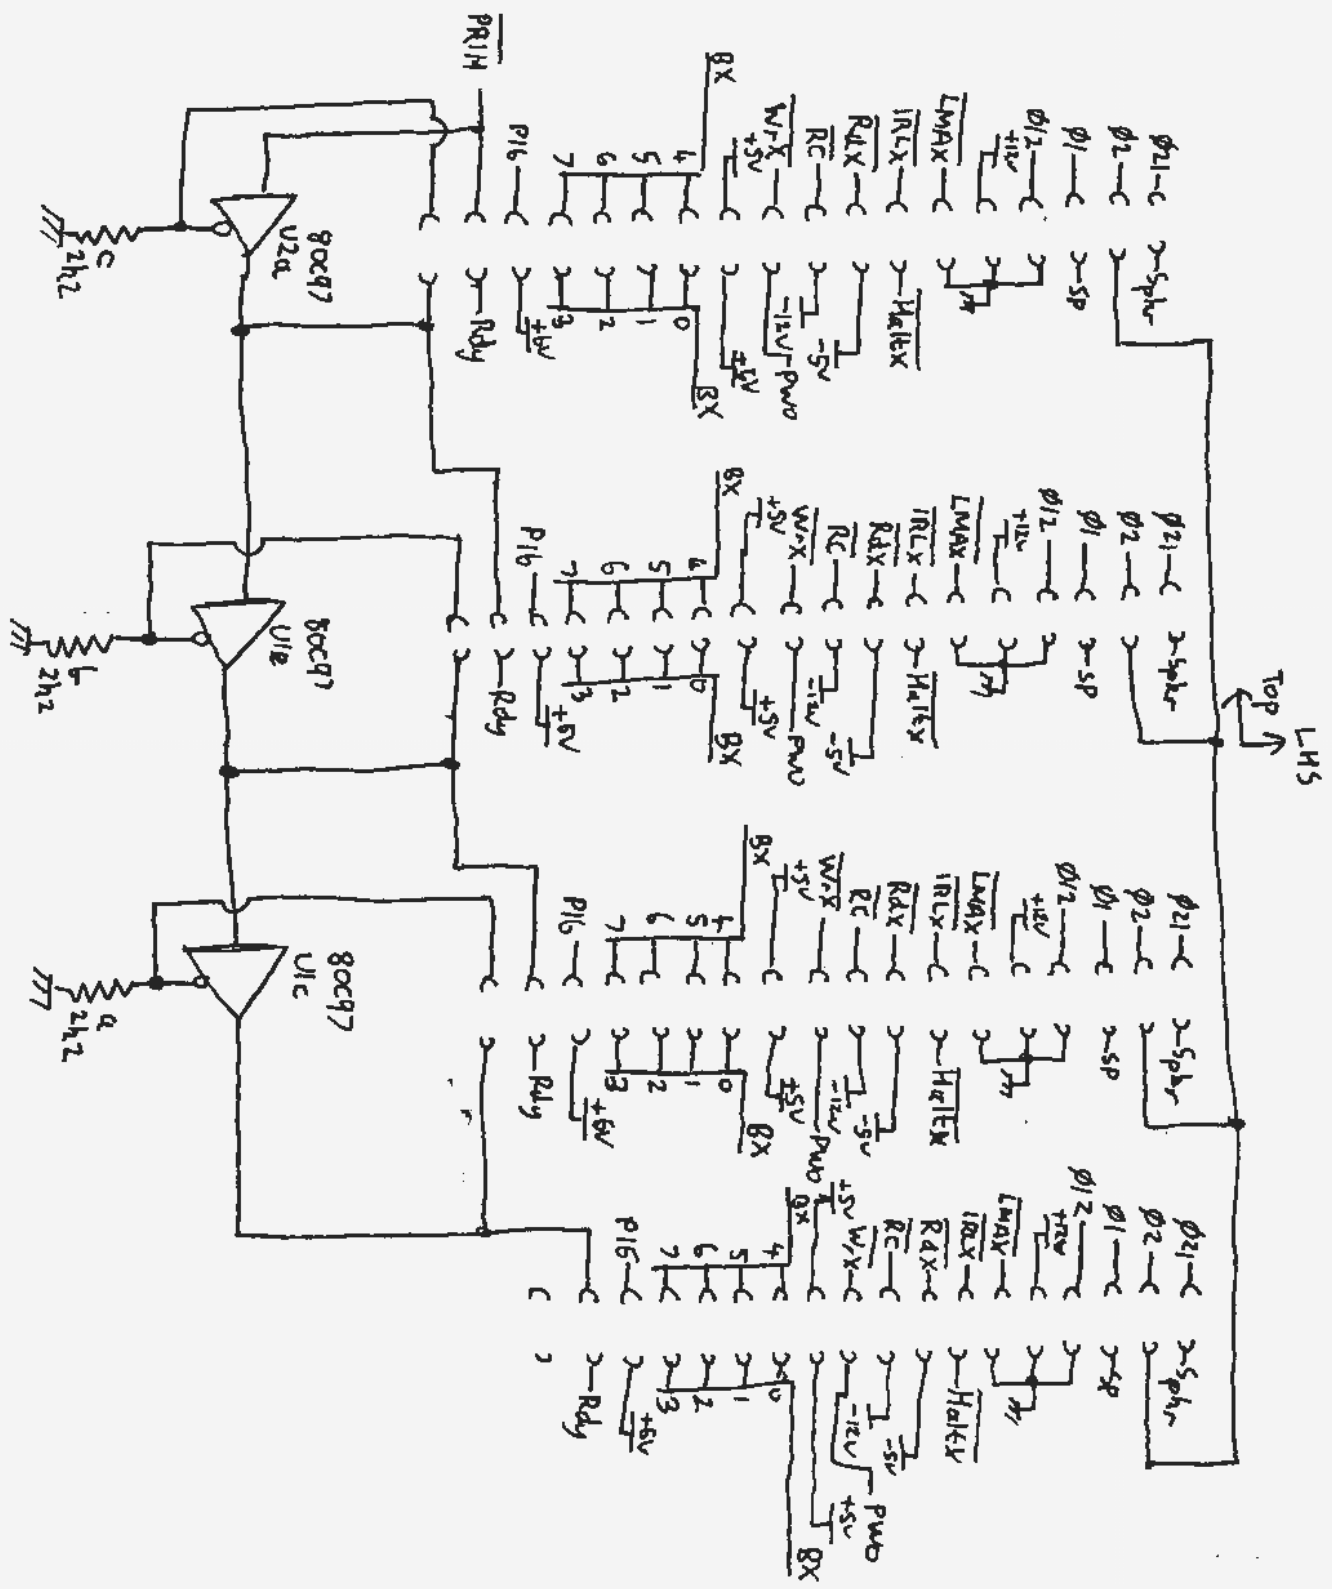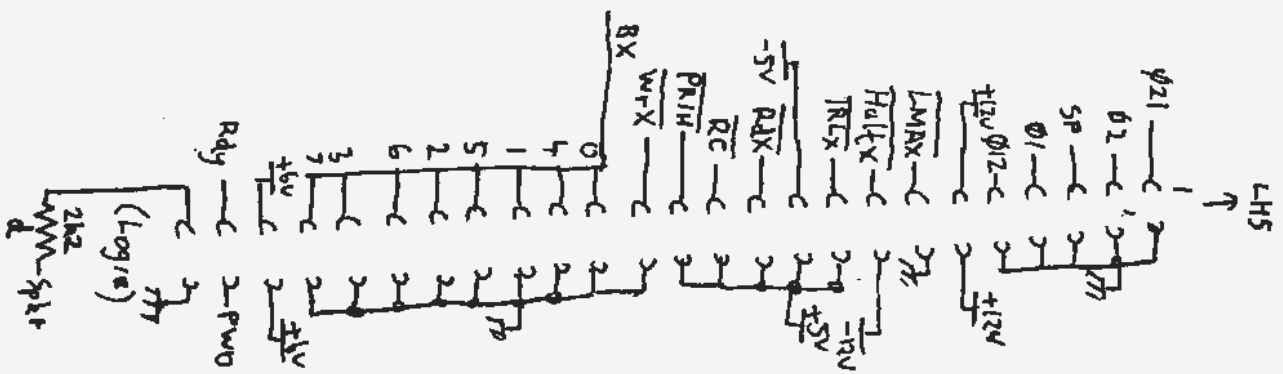

HP 86B I/O Backplane

00086-60003

Key Label	k8	k9	k10	k11	k12	k13	k14	k15	k16	k17
	h1	h2	h3	h4	h5	h6	h7			


Clear -Line	↖	↘	↙	→	↗
AVC					
VR					
-Char Roll					
↖					

	1	2	3	4	5	6	7	8	9	0	-	+	1	Back Space	
	@	#	\$	%	^	&	*	(	)	_	=	+ =	^		
Ctrl	Q	W	E	R	T	Y	V	I	O	P	{	}	TR/Menu Cont		
CAPS LOCK	A	S	D	F	G	H	J	K	L	;	:'	END LINE			
SHIFT	Z	X	C	V	B	N	M	,	<	>	?/	SHIFT	PLST LIT		
	SPACE BAR												STEP PAUSE	RUN	


Test E	7	8	9	/
Reset (	4	5	6	*
Init )	1	2	3	-
Reset	0	.	,	+

### HP86B Keycaps





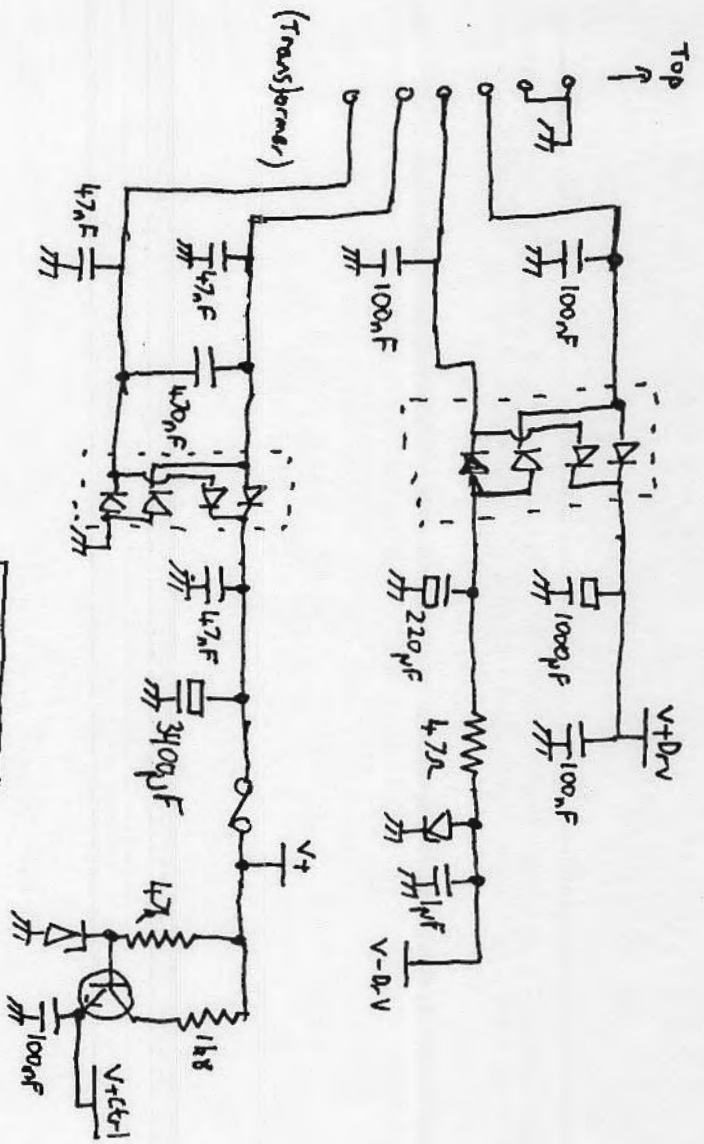


Input Rectifier

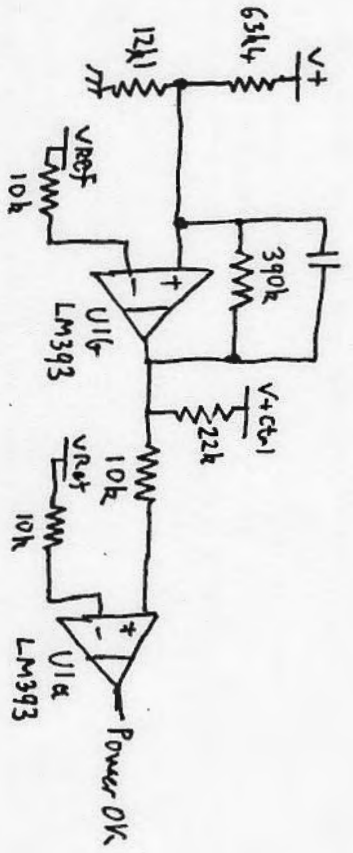

Power OK



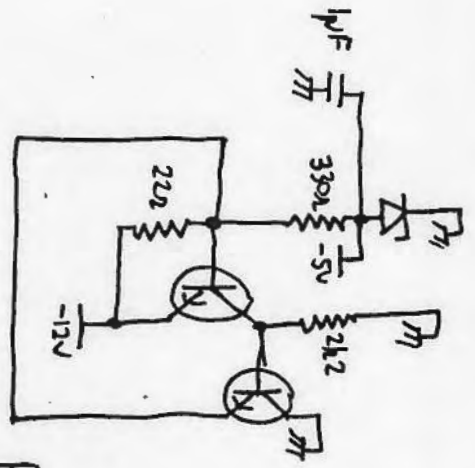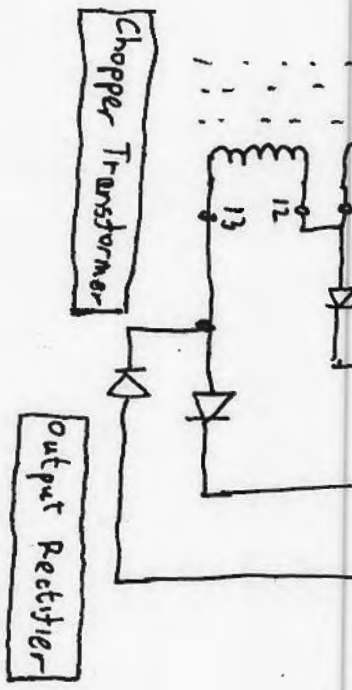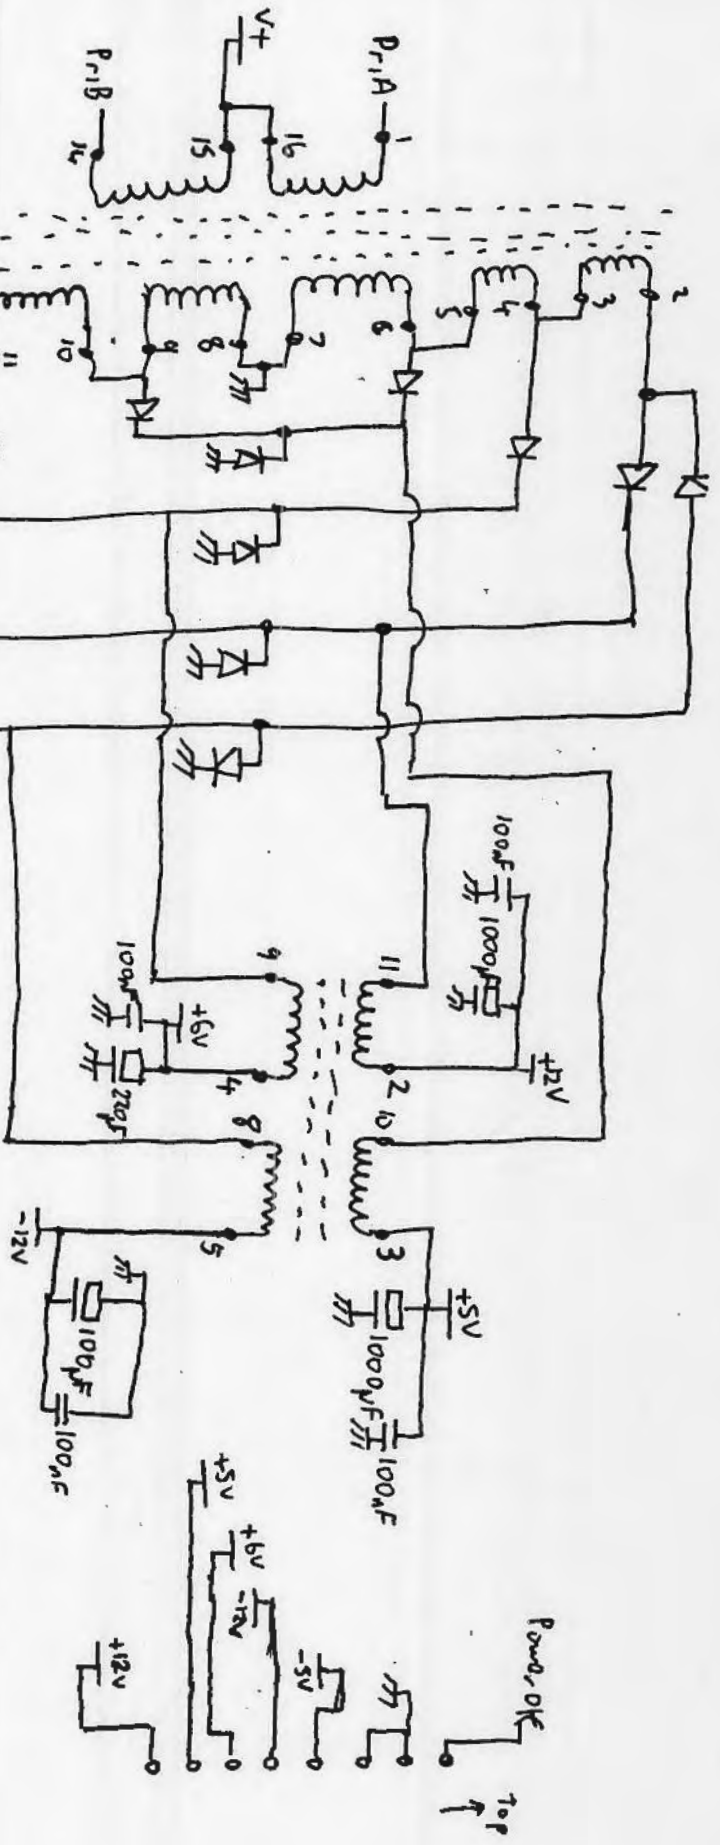

HP86B PSU Sheet ③

00086-60004

-5V Regulator

# HP86B Transformer Wiring

